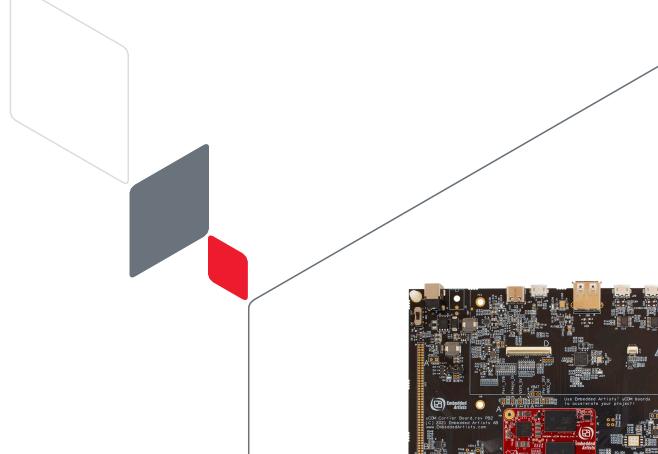


Wi-Fi®/Bluetooth® (CYW) for Embedded Artists' i.MX

Linux Quick Start Guide - Rev. 2.0





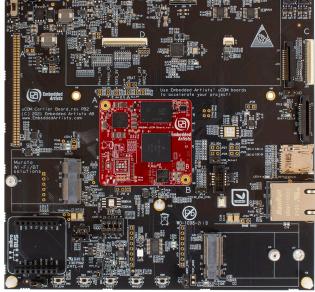




Table of Contents

	1 Introduction	ర
	2 Interfacing the Wi-Fi/Bluetooth M.2 Module (EVB)	4
	3 Download Prebuilt Linux Image and Flash Platform	5
	4 Connectivity Options	7
	4.1 Murata Wi-Fi/Bluetooth Modules	7
	4.1.1 Enable Wi-Fi	8
	4.1.2 Enable Bluetooth	9
	5 References	10
	6 Embedded Artists Wi-Fi/Bluetooth M.2 Modules	11
	Revision History	12
F	igures Figure 1: Embedded Artists' iMX8M Mini Developer's Kit V3 with Type 2AE M.2 Module	3
	Figure 2: Plug in the M.2 module at a shallow angle, inserting it fully into M.2 Connector	4
	Figure 3: Continue pushing with finger (for snug fit) while securing M.2 module with screw	4
	Figure 4: Embedded Artists i.MX Related Resources page	
	Figure 5: JP10 jumper (closed for flashing mode) on Developer's Kit	
	Figure 6: Image downloading	
	Figure 7: Image Download Complete	6
Т	ables	
	Table 1: Document Conventions	2
	Table 2: switch_module Commands	8
	Table 3: Embedded Artists' Wi-Fi/Bluetooth M.2 modules	11



About This Guide

This document guides the user on enabling a popular subset of Murata's Wi-Fi/Bluetooth modules (1YN, 1LV, 2AE, 1XA, 1MW, 1DX) on Embedded Artists' iMX8M Mini Developer's Kit V3 . All Murata Wi-Fi/Bluetooth modules are designed into Embedded Artists' M.2 modules . As such, the exercise of enabling various Murata modules is a simple matter of plug 'n play.

Audience & Purpose

This document is intended as an introduction for end users to start evaluating Murata Wi-Fi/Bluetooth solutions for Linux on Embedded Artists' i.MX platforms.

Document Conventions

Table 1 describes the document conventions used in this guide.

Table 1: Document Conventions

Conventions	Description	
	Warning Note Indicates very important note. Users are strongly recommended to review.	
i	Info Note Intended for informational purposes. Users should review.	
lī.	Menu Reference Indicates menu navigation instructions. Example: Insert→Tables→Quick Tables→Save Selection to Gallery □	
	External Hyperlink This symbol indicates a hyperlink to an external document or website. Example: Embedded Artists AB 🖸 Click on the text to open the external link.	
□¥	Internal Hyperlink This symbol indicates a hyperlink within the document. Example: Introduction Click on the text to open the link.	
Console input/output or code snippet	Console I/O or Code Snippet This text <i>Style</i> denotes console input/output or a code snippet.	
# Console I/O comment // Code snippet comment	Console I/O or Code Snippet Comment This text Style denotes a console input/output or code snippet comment. Console I/O comment (preceded by "#") is for informational purposes only and does not denote actual console input/output. Code Snippet comment (preceded by "//") may exist in the original code.	



1 Introduction

This Quick Start Guide details enabling a selection of Infineon based Murata's Wi-Fi/Bluetooth modules \Box specifically on the Embedded Artists' iMX8M Mini Developer's Kit V3 \Box (running Linux 5.10.72). The Embedded Artists' M.2 modules in this document covers:


- Type 1YN (CYW43439)
- Type 1LV (CYW43012)
- Type 2AE (CYW4373E)
- Type 1XA (CYW54591)
- Type 1MW (CYW43455)
- Type 1DX (CYW4343W)

The Embedded Artists' Developer's Kits / COM boards currently supported are based on i.MX 8, i.MX 7 and i.MX 6. All platforms have direct M.2 interconnect with following signals supported:

- WLAN-SDIO, WLAN-PCIe
- BT-UART, BT-PCM
- WLAN/BT control signals
- WLAN JTAG and WLAN/BT debug signals

Examples of hardware/software configurations are illustrated to introduce users to the Murata wireless solution and demonstrate the ease of getting started with Embedded Artists' hardware/software. **Figure 1** shows the Embedded Artists' hardware platform with one of the M.2 modules (2AE).

Figure 1: Embedded Artists' iMX8M Mini Developer's Kit V3 with Type 2AE M.2 Module

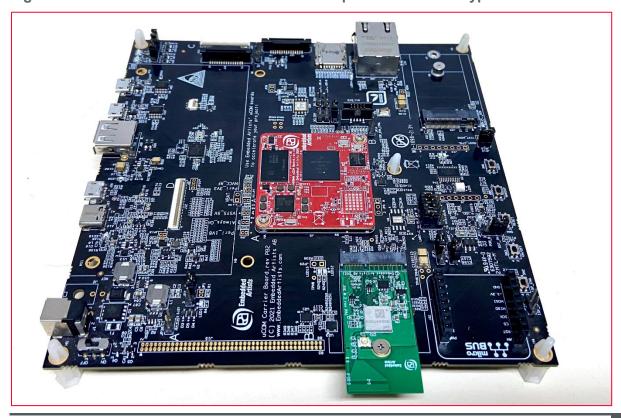



The Wi-Fi/Bluetooth M.2 interconnect on this Developer Kit is optimized to provide comprehensive signaling for all necessary bus interfaces (WLAN-SDIO, WLAN-PCIe, WLAN-USB, BT-UART, BT-PCM, WLAN and Bluetooth control signals). Embedded Artists document their platform extensively at this link \Box – select "Resources" tab. In particular, users are encourage to reference Embedded Artists' Getting Started with M.2 modules and i.MX6/7/8 on Linux v5.10 \Box ?. In addition, Murata provides the following document detailing Infineon based solutions: Murata Wi-Fi/BT (CYW) Solution for i.MX Linux User Guide \Box ?

The following sections describe the process of getting Wi-Fi and Bluetooth up and running on Embedded Artists' iMX8M Mini Developer's Kit V3 🗗 with Embedded Artists' M.2 Module based on Murata Wi-Fi/Bluetooth 🗗, running Embedded Artists' Linux 5.10.72 kernel release 🗂. This document also describes the process of easily switching between Embedded Artists' M.2 modules without any need for complicated hardware changes or software builds.



Note that Wi-Fi/Bluetooth M.2 EVB (Evaluation Board) is equivalent to Wi-Fi/Bluetooth M.2 module. We use "EVB" sometimes to better distinguish the M.2 form factor from the actual Murata module.

2 Interfacing the Wi-Fi/Bluetooth M.2 Module (EVB)

Figure 2 and **Figure 3** illustrate how Embedded Artists' M.2 module is connected to their iMX8M Mini Developer's Kit V3 in the M.2 slot. No additional cabling is required.

Figure 2: Plug in the M.2 module at a shallow angle, inserting it fully into M.2 Connector



Figure 3: Continue pushing with finger (for snug fit) while securing M.2 module with screw





3 Download Prebuilt Linux Image and Flash Platform

Embedded Artists provide prebuilt Linux images for users to quickly download and flash the i.MX platforms. These are available at Embedded Artists i.MX Related Resources Page . The following steps showcase the process of downloading and flashing the image for the Linux kernel 5.10.72. The host system being used is running Windows® 10. For detailed information from Embedded Artists, please refer to Embedded Artists' Getting Started with M.2 modules and i.MX6/7/8 on Linux v5.10 .

- Download the 5.10.72 Linux image for Embedded Artists' iMX8M Mini Developer's Kit V3 from Embedded Artists i.MX Related Resources Page ☐ as shown in **Figure 4**. The correct title of the download is "uuu_imx8mm_ucom_5.10.72.zip (release notes)".
- Extract the downloaded archive. This will extract both the image as well as the UUU
 application that can be used to flash the board.
- Put the Developer's Kit into OTG mode to download the image, by closing the JP10 jumper as shown in Figure 5.



Ensure that no Windows application (such as VMware Workstation) which may interfere with the USB device instantiation is running. The Embedded Artists Dev Kit's onboard eMMC flash is configured as a USB interface during this step.

- Power on the Developer's Kit.
- Open a command prompt, navigate to the folder where the downloaded zip file was extracted and run the UUU tool.

```
C:\> cd c:\temp\uuu_imx8mm_ucom_5.10.72
C:\temp\uuu_imx8mm_ucom_5.10.72> uuu.exe full_tar.uuu
```

- The terminal will show the download progress as shown in Figure 6.
- Wait till the download is complete as shown in Figure 7.
- Power off the Developer's Kit.
- Put the Developer's Kit into eMMC boot mode, by opening the JP10 jumper.
- Power on and boot the Developer's Kit.
 - Username: root
 - Password: pass

Figure 4: Embedded Artists i.MX Related Resources page

i.MX8M Mini uCOM Board / Kit			
Resource	Description	Updated	Size (MB)
uuu_imx8mm_ucom_5.10.72.zip (release notes)	UUU tool including bootloader, kernel (5.10.72) and file system images	2022-03-08	148.2
uuu_imx8mm_ucom_5.10.35.zip (release notes)	UUU tool including bootloader, kernel (5.10.35) and file system images	2022-01-12	183.0



Figure 5: JP10 jumper (closed for flashing mode) on Developer's Kit

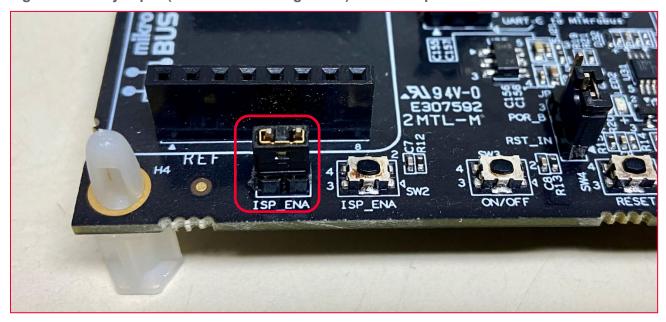


Figure 6: Image downloading

```
C:\temp\uuu_imx8mm_ucom_5.10.72>uuu.exe full_tar.uuu
uuu (Universal Update Utility) for nxp imx chips -- libuuu_1.3.191-0-g4fe24b9
Success 0 Failure 0
1:1 32/35 [=======> 28% ] FBK: ucp files/ea-image-base-imx8mmea-ucom.tar.bz2 t:-
```

Figure 7: Image Download Complete

```
C:\temp\uuu_imx8mm_ucom_5.10.72>uuu.exe full_tar.uuu
uuu (Universal Update Utility) for nxp imx chips -- libuuu_1.3.191-0-g4fe24b9
Success 1 Failure 0
1:1 35/35 [Done ] FBK: DONE
```



4 Connectivity Options

The modular design of Embedded Artists' Developer's Kits and the industry standard M.2 interface of the Murata Wi-Fi/BT modules allow users to quickly switch wireless solutions. Specifically, the Embedded Artists' solution makes switching wireless solutions quite simple by merely running the "switch_module.sh" script. This feature is consistent with Embedded Artists' overall approach to their hardware/software solutions: lowering the bar for customers so they can quickly get their desired software applications up and running.

4.1 Murata Wi-Fi/Bluetooth Modules

Supported Infineon-based Wi-Fi/Bluetooth modules include Type 1YN, Type 1LV and Type 2AE.

- Ensure the Developer's Kit is powered off and connect the Type 1YN M.2 module.
- Power on and boot the Developer's Kit. Issue the following commands to enable the Type 1YN module and reboot the platform.

```
$ switch_module.sh 1yn
$ switch_module.sh off
$ reboot
```

 The Developer's Kit should boot with and bring up Type 1YN's WLAN interface automatically.

To setup the Developer's Kit for working with the Type 2AE module, follow the same procedure outlined above.

• If powered, issue the "halt" command, and power off the Developer's Kit

```
$ halt
```

- Unscrew and disconnect the Type 1YN M.2 module from the Developer's Kit and connect the Type 2AE M.2 module.
- Set up the Developer's Kit for working with the Type 2AE module, by invoking the "switch module.sh script" and rebooting the platform as shown below.

```
switch_module.sh 2ae
switch_module.sh off
reboot
```

 The Developer's Kit should boot with and bring up Type 2AE's WLAN interface automatically.

Sections 4.1.1 🗗 and 4.1.2 🗗 provide more details on configuring and exercising Wi-Fi and Bluetooth, including console log output. Similarly, "switch_module.sh" script can be used to enable any of the bundled M.2 modules (see Section 6 🗂). The table below shows the switch_module commands for enabling the different Murata modules.



Table 2: switch_module Commands

Module	switch_module.sh Command
Type 1YN switch_module.sh 1yn	
Type 1LV switch_module.sh 1lv	
Type 2AE	switch_module.sh 2ae
Type 1XA	switch_module.sh 1xa
Type 1MW switch_module.sh 1mw	
Type 1DX	switch_module.sh 1dx

4 1 1 Fnable Wi-Fi

This section details steps for bringing up Wi-Fi on Infineon-based Wi-Fi/Bluetooth M.2 modules. For Infineon-based devices, the WLAN device name is **wlan0**. The logs shown below are for Type 2AE module.

Enable 2AE module with the following two "switch module.sh" commands.

```
root@imx8mmea-ucom:~# switch module.sh 2ae
DTB VER is v3
Setting up for 1DX, 1LV, 1MW, 1WZ, 1YN, 2AE (Cypress - SDIO)
Please wait for 15 seconds (one-time only)...
Disabling mlan0
Enabling wlan0
Created symlink /etc/systemd/system/multi-
user.target.wants/wpa supplicant@wlan0.service ->
/lib/systemd/system/wpa supplicant@wlan0.service.
Setup complete.
root@imx8mmea-ucom:~# switch module.sh off
DTB VER is v3
Disabling mlan0
Disabling wlan0
Removed /etc/systemd/system/multi-
user.target.wants/wpa supplicant@wlan0.service.
```

Issue the "reboot" command.

```
$ reboot
```

 After rebooting and logging in (username: "root"; password: "pass"), check to see if the interface is up.

```
# WLAN MAC address can be seen as Hwaddr
# The UP flag indicates the mlan0 interface is up
root@imx8mmea-ucom:~# ifconfig wlan0
wlan0          Link encap:Ethernet          HWaddr 10:A5:D0:99:27:3B
                UP BROADCAST MULTICAST          MTU:1500          Metric:1
                RX packets:0 errors:0 dropped:0 overruns:0 frame:0
                TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
                collisions:0 txqueuelen:1000
                RX bytes:0 (0.0 B)          TX bytes:0 (0.0 B)
```



Scan for available Wi-Fi networks.

```
$iw dev wlan0 scan
```

Connect to an unsecured Access Point (AP) "Murata 5G".

```
root@imx8mmea-ucom:~# iw dev wlan0 connect Murata 5G
root@imx8mmea-ucom:~# [ 45.537898] IPv6: ADDRCONF(NETDEV CHANGE):
wlan0: link becomes ready
$ iw dev mlan0 link
Connected to 84:1b:5e:f6:a7:60 (on wlan0)
       SSID: Murata 5G
       freq: 5180
       RX: 1944 bytes (8 packets)
        TX: 0 bytes (0 packets)
        signal: -44 dBm
        tx bitrate: 24.0 MBit/s
        bss flags:
        dtim period:
                        1
       beacon int:
                      100
```

Run DHCP client to get IP address.

```
root@imx8mmea-ucom:~# udhcpc -i wlan0
udhcpc: started, v1.33.1
udhcpc: sending discover
udhcpc: sending select for 192.168.1.16
udhcpc: lease of 192.168.1.16 obtained, lease time 86400
/etc/udhcpc.d/50default: Adding DNS 192.168.1.1
```

Ping AP (IP address 192.168.10.1) to check connectivity.

```
$ ping 192.168.10.1
```

4.1.2 Enable Bluetooth

This section includes the steps to bring up Bluetooth and scan for Bluetooth devices for IFX modules. The logs shown below are for Type 2AE module.

• Load the Bluetooth driver by issuing the following command. The Linux BlueZ stack is used for Bluetooth operations.

```
root@imx8mmea-ucom:~# /opt/ea/bluetooth_up.sh
bcm43xx_init
Set Controller UART speed to 3000000 bit/s
Flash firmware /etc/firmware/BCM4373A0.2AE.hcd
Set Controller UART speed to 3000000 bit/s
Setting TTY to N_HCI line discipline
Device setup complete
Scanning ...
28:39:5E:24:FE:95 [AV] Samsung Soundbar K450 K-Series
50:14:79:B8:2D:09 j755020
```



5 References

Links	Description
Forum Pages	
Murata Community Forum Landing Page ⊑7	Main Forum landing page.
Registration Page for new users □	Future FAEs and other Future employees need to use their Future corporate email address to register. Once they have registered and been approved, we will add them to Future's private group on the Forum which is used to exchange sensitive IP – board schematics, etc.
Community Forum Help □7	Landing page providing help to users. Links to necessary documents.
Troubleshooting Login and Registration ☐	Specific post which details how to troubleshoot any login or registration issues. Normally we don't see any registration issues.
Wi-Fi/Bluetooth section ☐	Starting point for any questions on Wi-Fi/Bluetooth module documents.
Embedded Artists' Platform section	Starting point for any question on Embedded Artists' iMX8M Mini Developer's Kit V3.
IFX-based Module section ☐	Infineon-based modules: 1YN, 1LV, and 2AE. Also included are 1DX, 1MW, and 1XA.
Website Pages	
Murata's Wi-Fi/BT Module Landing Page ⊑2	Lists all of Murata Wi-Fi/Bluetooth modules. Provides quick links to each module webpage.
Murata's IFX-based Modules □7	Lists all Infineon-based Murata Wi-Fi/Bluetooth modules. Provides quick links to each module webpage.
Murata's i.MX Solution Landing Page ☐	Murata's i.MX solution landing page. Details Murata Wi-Fi/Bluetooth module solutions for various i.MX processor platforms. Comprehensive documentation posted here.
Embedded Artists' M.2 Landing Page ☐	Embedded Artists' landing page for Murata-based Wi-Fi/Bluetooth M.2 modules.
Embedded Artists' COM Boards ⊑2	Embedded Artists' landing page for Embedded Artists' i.MX application processor-based COM boards.
Embedded Artists' i.MX 8M Mini Dev Kit V3 Resource Page 🗗	Comprehensive documentation from Embedded Artists on their Developer's Kit. Select "Resource" tab on this webpage.



6 Embedded Artists Wi-Fi/Bluetooth M.2 Modules

The following table lists the Embedded Artists' Wi-Fi/Bluetooth modules.

Table 3: Embedded Artists' Wi-Fi/Bluetooth M.2 modules

Interface	Embedded Artists M.2 EVB	Murata Module
WLAN-SDIO	Type 1YN M.2 □	Type 1YN □?
WLAN-SDIO	Type 1LV M.2 □	Type 1LV □?
WLAN-SDIO	Type 2AE M.2 □	Type 2AE □?
WLAN-SDIO	Type 1XA M.2 □	Type 1XA □?
WLAN-SDIO	Type 1MW M.2 ☐	Type 1MW □²
WLAN-SDIO	Type 1DX M.2 □	Type 1DX □?



Revision History

Revision	Date	Author	Change Description
1.0	Jan 18, 2021	TF	Initial Release
2.0	Oct 19, 2022	TF	Updated to new format





Copyright © Murata Manufacturing Co., Ltd. All rights reserved. The information and content in this document are provided "as-is" with no warranties of any kind and are for informational purpose only. Data and information have been carefully checked and are believed to be accurate; however, no liability or responsibility for any errors, omissions, or inaccuracies is assumed.

Wi-Fi[®] is a registered trademark of Wi-Fi Alliance. The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other brand and product names are trademarks or registered trademarks of their respective owners.

Specifications are subject to change without notice.