

ACAN-102 Application Note

The application note describes the PMBus™ digital communications protocol features of D1U54T-M-1500-12-HUxC-xx and D1U54T-W-1500-12-HUxTC-xx series power supplies.

#### Standard PMBus™ characteristics

- Complies with PMBus™ Power Systems Management Protocol Part 1 General Requirements Rev 1.2 including use of PEC (Packet Error Checking).
- Linear data format is used for all supported parameters unless noted.
- A minimum of 300µs delay between transactions (between the STOP of one command and the START of the next command) is required.
- 100KHz I<sup>2</sup>C communications is supported for the PMBus™ interface.

#### Internal PSU Device Details

Power Supply Controllers			
Vendor	MFG Part Number	Package	Description
Texas Instruments	UCD3138128PFCR	TQFP80	(Secondary) 32-bit ARM7, 64Kx2 flash, 8K SRAM, -40C to 125C
Texas Instruments	UCD3138064RMH	QFN40	(Primary) 32-bit ARM7, 32Kx2 flash, 4K SRAM, -40C to 125C
Microchip	24AA512	SOIC8	Power Supply External 512kb EEPROM

#### **Device Addressing:**

The following addresses can be assigned to the power module's internal slave devices by placing a pulldown resistor "Rn" from "APS" pin to output return as defined in the following table:

Slave Device Ad	Idress Options	Pn (ohm) connected between ACD and cutnut return		
Microcontroller	External EEPROM	Rn (ohm) connected between ASP and output return		
0xB0	0xA0	820		
0xB2	0xA2	2700		
0xB4	0xA4	5600		
0xB6	0xA6	8200		
0xB8	0xA8	15000		
0xBA	0xAA	27000		
0xBC	0xAC	56000		
0xBE	0xAE	180000		



ACAN-102 Application Note

PMBus™ Command List: Pg. 0

Command Code	Command Name	Read / Write	# of Bytes	Byte Name	Bit(s) Number	Bit Name	Definition	Supported Y/N
Oodo		Willo	Dytos		Numbor		Command to provide ability to configure, control & monitor multiple	1/10
00	PAGE	R/W Byte	1				outputs Page 0 -> Main output	YES
							Page 1 -> Standby output  Turn the power supply on/off	
01	ODEDATION	DAM Duto	4				00h - to turn off	VEC
01	OPERATION	R/W Byte	1				80h - to turn on	YES
00	ON OFF CONFIC	Dood Duto	1				The default value is 80h	YES
02	ON_OFF_CONFIG	Read Byte					Define ON/OFF config. Always read 1Dh  Write only command clears all faults that have been set in all the	
03	CLEAR_FAULTS	Send Byte	0				STATUS_XXXX	YES
							Data byte value = 1000 0000b => Disable all writes except to the	
							WRITE_PROTECT command Data byte value = 0100 0000b => Disable all writes except to the	
10	WRITE_PROTECT	R/W Byte	1				WRITE_PROTECT, OPERATION, PAGE command	YES
							Data byte value = 0000 0000b => Enable writes to all commands	
							Default value: 00000000b  This command provides a way for a host system to determine some	
19	CAPABILITY	Read Byte	1				key capabilities of a PMBus device. Always read B0h	YES
			·				PEC supported, 400kHz bus speed, SMBALERT supported	
		Write						
		Word/Bloc k Write -	2/				Used to prevent a warning or fault condition from asserting the	
1B	SMBALERT_MASK	Block	Varia				SMB_ALERT signal. Support the following Status_x command code:	YES
		Read	ble				7A, 7B, 7C, 7D, 7E, 81	
		Process Call						
		Gali					Single data byte sets the READ_VOUT sensor to linear mode data	
20	VOUT_MODE	Read Byte	1				format and supplies N exponent; refer to linear mode details for	NO
							output voltage reading real world value determinations	
							Show the config of fan. Always read D0h Fan installed in position 1.	
3A	FAN_CONFIG_1_2	Read Byte	1				Fan 1 commanded in RPM.	YES
							2 Tachometer pulses per revolution.	
							No fan installed in position 2.  Manual fan override command fan speed value in RPM	
3B	FAN_COMMAND_1	R/W Word	2				Command speed formatted in Linear	YES
40	VOUT_OV_FAULT_LIMIT	Read Byte	2				Output overvoltage fault threshold (13.9V)	NO
42	VOUT_OV_WARN_LIMIT	Read Byte	2				Output overvoltage warning threshold (13.1/12.6V)	NO
43	VOUT UV WARN LIMIT	Read Byte	2				Output undervoltage warning threshold (11.4/11.7V)	NO
44	VSTBY_UV_FAULT_LIMIT	Read Byte					Output undervoltage fault threshold (10.5V)	NO
4F	OT_FAULT_LIMIT	Read Byte	2				Overtemperature fault threshold (65/58 degC)	NO
							Sets the value of the output current, in amperes, that causes the overcurrent detector to indicate an overcurrent fault condition (Main	
46	IOUT OC EAULT LIMIT	R/W Word	2				output latch off and IOUT_OC_F bit of STATUS_IOUT register is set).	YES
40	IOUT_OC_FAULT_LIMIT	n/w woru					Default setting is 150A for high range input, 83.4A for low range	IEO
							input. Allowable limit range is 1A to 150A for high range input, 1A to 83.4A for low range input.	
							Sets the value of the output current, in amperes, that causes the	
							overcurrent detector to indicate an overcurrent warning (Output	
							keeps operating and IOUT_OC_W bit of STATUS_IOUT register is	
4A	IOUT_OC_WARN_LIMIT	R/W Word	2				set). Warning status will be cleared when output current drops to 2A below the warning set threshold.	YES
							Default setting is 137.5A for high range input, 76.5A for low range	
							input. Allowable limit range is 1A to 137.5A for high range input, 1A	
							to 76.5A for low range input.  Set the temperature, in degrees Celsius, of the unit at which it	
							should indicate an Overtemperature Warning alarm. (Output keeps	
							operating and TEMPERATURE_OT_W bit of	
51	OT_WARN_LIMIT (Hot Spot)	R/W Word	2				STATUS_TEMPERATURE register is set). Warning status will be	YES
							cleared when temperature drops to 10degC below the warning set threshold.	
							Default setting is 98degC. Allowable limit range is 0 to 98degC.	
55	VIN_OV_FAULT_LIMIT	Read Byte	2				Input overvoltage fault threshold (323/322Vac for AC input,	NO
	0						405/401V for DC input)	



Command Code	Command Name	Read / Write	# of Bytes	Byte Name	Bit(s) Number	Bit Name	Definition	Supported Y/N
57	VIN_OV_WARN_LIMIT	Read Byte					Input overvoltage warning threshold (305/302Vac for AC input , 400/397V for DC input)	NO
58	VIN_UV_WARN_LIMIT	Read Byte	2				Input undervoltage fault threshold (83/87Vac for low range AC input, 165/174Vac for high range AC input, 180/186V for DC input)	NO
59	VIN_UV_FAULT_LIMIT	Read Byte	2				Input undervoltage warning threshold (80/86Vac for AC input, 160/170V for DC input)	NO
5D	IIN_OC_WARN_LIMIT	R/W Word	2				Sets the value of the input current, in amperes, that causes a warning that the input current is high (Output keeps operating and IIN_OC_W bit of STATUS_INPUT register is set). Warning status will be cleared when input current drops to 1A below the warning set threshold.	YES
6A	POUT_OP_WARN_LIMIT	R/W Word	2				Default setting is 17.5A. Allowable limit range is 0 to 17.5A.  Sets the value of the output power, in watts, that causes a warning that the output power is high (Output keeps operating and POUT_OP_W bit of STATUS_IOUT register is set). Warning status will be cleared when output power drops to 50W below the warning set threshold.  Default setting is 1600W for high range input, 892W for low range input. Allowable limit range is 0W to 1600W for high range input, 0W to 892W for low range input.	YES
6B	PIN_OP_WARN_LIMIT	R/W Word	2				Sets the value of the input power, in watts, that causes a warning that the input power is high (Output keeps operating and PIN_OP_W bit of STATUS_INPUT register is set). Warning status will be cleared when input power drops to 50W below the warning set threshold.  Default setting is 1850W for high range input, 1030W for low range input. Allowable limit range is 0Wto 1850W for high range input, 0W to 1030W for low range input.	YES
					7	BUSY_F	Asserted when device busy and unable to respond fault	NO
				STATUS_BYTE (Lower byte of	6 5	UNIT_OFF OUTPUT OV F	Asserted when unit not providing power to the output Asserted when an output overvoltage fault has occurred	YES YES
					4	OUTPUT_OC_F	Asserted when an output overcurrent fault has occurred	YES
78	STATUS_BYTE	Read Byte	1		3	INPUT_UV_F	Asserted when an input undervoltage fault has occurred	YES
		, <b>,</b>		STATUS_WORD)	2		Asserted when an overtemperature fault or warning has occurred	YES
				ontide_world	1	CML_F	Asserted when a communications, memory, or logic fault has occurred	YES
					0	NONE_F_W	Asserted when a fault not listed in [7:1] occurred	YES
					7	BUSY_F	Asserted when device busy and unable to respond fault	NO
					6	UNIT_OFF	Asserted when unit not providing power to the output	YES
					5	OUTPUT_OV_F	Asserted when an output overvoltage fault has occurred	YES
				STATUS_BYTE	4	OUTPUT_OC_F	Asserted when an output overcurrent fault has occurred	YES
				(Lower byte of	3	INPUT_UV_F	Asserted when an input undervoltage fault has occurred	YES
				STATUS_WORD)	1	CML_F	Asserted when an overtemperature fault or warning has occurred Asserted when a communications, memory, or logic fault has occurred	YES YES
					0	NONE_F_W	Asserted when a fault not listed in [7:1] occurred	YES
79	STATUS_WORD	Read Word	2			VOUT_F_W	Asserted when an output voltage fault or warning has occurred	YES
	555_Holls		_		6	IOUT_POUT_F_W	Asserted when an output current / output power fault or warning has occurred	YES
				STATUS_WORD	5	INPUT_F_W	Asserted when an Input voltage/current/power fault or warning has occurred	YES
				(Upper byte of STATUS_WORD)	4		Manufacturer specific fault or warning has occurred	NO
				STATUS_MOUD)	3		Asserted when the POWER_GOOD signal is negated	YES
					2	FANS_F_W	Asserted when a fan fault or warning has occurred	YES
					1		Asserted when a bit in command STATUS_OTHER set	NO
					0	UNKNOWN_F_W	Asserted when a fault not listed in [15:1] has occurred	Yes



Command Code	Command Name	Read / Write	# of Bytes	Byte Name	Bit(s) Number	Bit Name	Definition	Supported Y/N
					7	VOUT_OV_F	Asserted when an output overvoltage fault has occurred	YES
					6	VOUT_OV_W	Asserted when an output overvoltage warning has occurred	YES
					5	VOUT_UV_W	Asserted when an output undervoltage warning has occurred	YES
					4	VOUT_UV_F	Asserted when an output undervoltage fault has occurred	YES
74	CTATUC VOLIT	DAM Di to			3	VOUT_MAX_F	Asserted when the output is set higher than the commanded VOUT_MAX limit	NO
7A	STATUS_VOUT	R/W Byte	1 -		2	TON_MAX_F	Asserted when the output turn-on timing has exceeded the TON_MAX fault timing	NO
					1	TON_MAX_W	Asserted when the output turn-on timing has exceeded the TON_MAX warning timing	NO
					0	VOUT_TRACKING_E	Asserted when an error in the output voltage during power-up/down has occurred	NO
					7	IOUT_OC_F	Asserted when an output overcurrent fault has occurred	YES
					6	IOUT_OC_SHUTDOWN	Iduit Has occurred	NO
					5		Asserted when an output overcurrent warning has occurred	YES
7B	STATUS_IOUT	R/W Byte	1		4		Asserted when an output undercurrent fault has occurred	NO
					3		Asserted when an output current share fault has occurred	NO
					2		Asserted when the unit has entered output power limiting mode	NO
					1	POUT_OP_F	Asserted when an output overpower fault has occurred	YES
					0	POUT_OP_W	Asserted when an output overpower warning has occurred	YES
					7	VIN_OV_F	Asserted when an input overvoltage fault has occurred (For D1U54T-M-1500-12-HUxC, Vin > 323Vac/405Vdc. For D1U54T-W-1500-12-HUxTC, Vin > 300Vac/310Vdc)	YES
					6	VIN OV W	Asserted when an input overvoltage warning has occurred	YES
					5	VIN_UV_W	Asserted when an input undervoltage warning has occurred  Asserted when an input undervoltage warning has occurred	YES
7C	STATUS_INPUT	R/W Byte	1 -		4			YES
							Asserted when an input undervoltage fault has occurred	
					3	VIN_UV_OFF	Asserted when the Unit is OFF for insufficient input voltage	YES
					2		Asserted when an input overcurrent fault has occurred	NO VEO
					1	IIN_OC_W	Asserted when an input overcurrent warning has occurred	YES
					0		Asserted when an input overpower warning has occurred	YES
					7		Asserted when an overtemperature fault has occurred	YES
					6		Asserted when an overtemperature warning has occurred	YES
					5		Asserted when an undertemperature warning has occurred	NO
7D	STATUS_TEMPERATURE	R/W Byte	1 -		4		Asserted when an undertemperature fault has occurred	NO
					3	RESERVED	Reserved	NO
					2	RESERVED	Reserved	NO
					1	RESERVED	Reserved	NO
					0	RESERVED	Reserved	NO
					7		Asserted when an invalid or unsupported command is received	YES
					6	CML_DATA_E	Asserted when invalid or unsupported data is received	YES
					5	CML_PEC_E	Asserted when a packet error checking (PEC) failed has occurred	YES
7E	STATUS_CML	R/W Byte	1 -		4	CML_MEMORY_F	Asserted when a memory fault is detected (example: Checksum errors during bootload)	NO
	5.7.1.00_SINE				3		Asserted when a processor fault is detected	NO
					2	RESERVED	Reserved	NO
					1	COMMS_F	Asserted when an internal communication fault has occurred	YES
					0	CML_OTHER_F	Asserted when another memory or logic fault has occurred (example: UART error)	NO VEO
					7		Fan 1 fault	YES
					6		Fan 2 fault	NO
					5	FAN_1_W	Fan 1 warning	YES
81	STATUS_FANS_1_2	R/W Byte	1		4		Fan 2 warning	NO
01	01/1100_1/110_1_2	1.0 11 Dy (0	'		3		Fan 1 speed overridden	YES
					2		Fan 2 speed overridden	NO
					1		Airflow fault	NO
					0	FAN_AIRFLOW_W	Airflow warning	NO
							Input Voltage Sensor Reading in Vdc	
							PMBus Data Format : Linear	
88	READ_VIN	Read Word	2				PMBus Resolution: 0.25Vdc	YES
	_						Full-scale: 511Vdc	



nmand Code	Command Name	Read / Write	# of Bytes	Byte Name	Bit(s) Number	Bit Name	Definition	Suppo Y/N
	DEAD III				Ivambor		Input Current Sensor Reading in Arms PMBus Data Format : Linear	
89	READ_IIN	Read Word	2				PMBus Resolution: 1mA Full-scale: 28.2A	YES
							Full-scale : 28.2A Accuracy: +/-5% @>20% load	
							Bulk Capacitor Voltage Sensor Reading in Vdc	
							PMBus Data Format : Linear	
3A	READ VCAP	Read Word	2				PMBus Resolution: 0.1Vdc	YES
"、	11212_1011	rioda rrora	_				Full-scale : 511 Vdc	
							Accuracy: +/-2%	
							Output Voltage Sensor Reading in Vdc	
							PMBus Data Format : Linear	
В	READ_VOUT	Read Word	2				PMBus Resolution: 0.00156Vdc	YE
	_						Full-scale: 16 Vdc	
							Accuracy: +/-2%	
							Output Current Sensor Reading in Adc	
							PMBus Data Format : Linear	
С	READ_IOUT	Read Word	2				PMBus Resolution: 0.0625A	YE
	_						Full-scale : 226A	
							Accuracy: +/-5% @>20% load	
							Temperature Sensor reading in °C	
							PMBus Data Format : Linear (N = -3)	
D	READ_TEMPERATURE_1	Read Word	2				PMBus Resolution: 0.125 °C	YE
	_						Range: -128°C to 128°C	
							Accuracy: +/-3°C	
							Temperature Sensor reading in °C	
							PMBus Data Format : Linear (N = -3)	
E	READ_TEMPERATURE_2	Read Word	2				PMBus Resolution: 0.125 °C	YE
							Range : -128°C to 128°C	
							Accuracy: +/-3°C	
							Temperature Sensor reading in °C	
							PMBus Data Format : Linear (N = -3)	
F	READ_TEMPERATURE_3	Read Word	2				PMBus Resolution: 0.125 °C	YE
							Range: -128°C to 128°C	
							Accuracy: +/-3°C	
							Fan Speed Sensor reading in RPM	
							PMBus Sensor Data Format : Linear (N = 5 RPM_MAX <= 32736)	
0	READ_FAN_SPEED_1	Read Word	2				PMBus Sensor Resolution: 32 RPM (N=5)	YE
							Full-scale: 32736 RPM	
							Accuracy: +/-500RPM of full-speed	
							Output Power Sensor reading in watts	
							PMBus Data Format : Linear	
6	READ_POUT	Read Word	2				PMBus Resolution: 0.25 Watts	YE
							Full-scale :4092W	
							Accuracy: +/-5% @>20% load	
							Input Power Sensor reading in watts	
							PMBus Data Format : Linear	
7	READ_PIN	Read Word	2				PMBus Resolution: 0.25 Watts	YE
							Full-scale : 4092W	
							Accuracy: +/-5% @>20% load	
							Reading of the PMBus revision to which the power supply is	
8	PMBUS_REVISION	Read Byte	1				compliant	YE
							Always read 22h	
9	MFR_ID		1+9				Manufacture's ID (ASCII code): Murata-PS	YE
					$\top$		Manufacture's Model Number (ASCII code):	
							D1U54T-M-1500-12-HU4C (M5803) or D1U54T-M-1500-12-HU3C	
Α	MFR_MODEL		1+22				(M5804)	YE
							or D1U54T-W-1500-12-HU4TC (M5808) or D1U54T-W-1500-12-	
		Block					HU3TC (M5809)	
		Read			$\top$		Manufacturer's model revision (ASCII code). XXXX-YYYY-0000	
В	MFR_REVISION		1+14				XXXX - Primary FW version/revision, YYYY- Secondary FW	YE
							version/revision	
С	MFR_LOCATION		1+5				Identify the facility that manufactured the unit (ASCII code) : China	YE
D D	MFR_DATE		1+4				Identify the unit's date of manufacture (ASCII code: YYWW, e.g.	YES
	IVII II DAIL		177				1935, 19-> year, 35 -> week)	16

Command	Command Name	Read / # of	Byte Name	Bit(s)	Bit Name	Definition	Supported
www.mi	urata.com/support						



Code	OVATOR IN ELECTR		Bytes	Number		Y/N
9E	MFR_SERIAL	Block Read	1+12		Serial Number : SSYYWWRR**** MPS 12-digit serial number	YES
A0	MFR_VIN_MIN	Read Word	2		Minimum rated value of the input voltage = 90Vrms. Always read F8B4h	YES
<b>A</b> 1	MFR_VIN_MAX	Read Word	2		For D1U54T-M-1500-12-HUxC, Maximum rated value of the input voltage = 305Vrms Always read FA62h.  For D1U54T-W-1500-12-HUxTC, Maximum rated value of the input voltage = 264Vrms Always read FA10h.	YES
A2	MFR_IIN_MAX	Read Word	2		Maximum rated value of the input current = 10 Amps (High line AC or DC input) / 11Amps (Low line AC input). Always read D280h (High line AC or DC input) / D2C0h (Low line AC input).	YES
A3	MFR_PIN_MAX	Read Word	2		Maximum rated value of the input power = 1700 W (High line AC or DC input) / 1000 W (Low line AC input). Always read 0B52h (High line AC or DC input) / 03E8h (Low line AC input).	YES
A4	MFR_VOUT_MIN	Read Word	2		Minimum rated value of the output voltage = 11.64V. Always read D2E9h.	YES
<b>A</b> 5	MFR_VOUT_MAX	Read Word	2		Maximum rated value of the output voltage = 12.36V. Always read D317h.	YES
A6	MFR_IOUT_MAX	Read Word	2		Maximum rated value of the output current = 125A (High line AC or DC input) / 69.5A (Low line AC input). Always read EBE8h (High line AC or DC input) / EA2Ch (Low line AC input).	YES
A7	MFR_POUT_MAX	Read Word	2		Maximum rated value of the output power = 1500W (High line AC or DC input) / 836W (Low line AC input). Always read 0AEEh (High line AC or DC input) / 0344h (Low line AC input).	YES
A8	MFR TAMBIENT MAX	Read Word	2		Maximum ambient temperature 45degC. Always read E2D0h	YES
A9	MFR TAMBIENT MIN	Read Word			Minimum ambient temperature: -5degC. Always read CD80h	YES
AA	MFR_EFFICIENCY_LL	Block Read	1+14		Retrieves information about the efficiency of the device while operating at a low line condition. Vin =115V, LP = 167W, Leff = 92%, MP = 418W, Meff = 94%, HP = 836W, Heff = 90%. Always read 0x98, 0xEB, 0x4E, 0xF9, 0xE0, 0xEA, 0xA2, 0x01, 0xF0, 0xEA, 0xA2, 0x09, 0xD0, 0xEA	YES
AB	MFR_EFFICIENCY_HL	Block Read	1+14		Retrieves information about the efficiency of the device while operating at a high line condition. Vin =230V, LP = 300W, Leff = 94%, MP = 750W, Meff = 96%, HP = 1500W, Heff = 91%.  Always read 0x98, 0xF3, 0x58, 0xFA, 0xF0, 0xEA, 0xEE, 0x02, 0x00, 0xEB, 0xEE, 0x0A, 0xD8, 0xEA	YES
D0	READ_VOUT2	Read Word	2		Standby Output Voltage Sensor Reading in Vdc PMBus Data Format : Linear (N=-6) PMBus Resolution: 0.01563Vdc Full-scale : 16 Vdc Accuracy: +/-2%	YES
D1	READ_IOUT2	Read Word	2		Standby Output Current Sensor Reading in Adc PMBus Data Format : Linear (N=-7) PMBus Resolution: 0.00781A Full-scale : 8A Accuracy: +/-5% @>20% load	YES
D2	READ_POUT2	Read Word	2		Standby Output Power Sensor reading in watts PMBus Data Format : Linear (N=-5) PMBus Resolution: 0.03125W Full-scale : 32W Accuracy: +/-5% @>20% load	YES



Command Code	Command Name		# of Bytes	Byte Name	Bit(s) Number	Bit Name	Definition	Supported Y/N
		WIIIO			7	BUSY_F	Asserted when device busy and unable to respond fault	NO
					6	UNIT_OFF	Asserted when unit not providing power to the output	YES
					5	VSB VOUT OV F	Asserted when an output overvoltage fault has occurred	YES
				STATUS BYTE	4	VSB_IOUT_OC_F	Asserted when an output overcurrent fault has occurred	YES
				(Lower byte of	3	INPUT_UV_F	Asserted when an input undervoltage fault has occurred	YES
				STATUS_WORD)	2			YES
				_ ,	1	CML_F	Asserted when a communications, memory, or logic fault has occurred	YES
					0	NONE_F_W	Asserted when a fault not listed in [7:1] occurred	YES
D3	VSB_STATUS_WORD	Read Word	2		7	VSB_VOUT_F_W	Asserted when an output voltage fault or warning has occurred	YES
	V05_01/1100_W0115	noda word	_		6	VSB_IOUT_POUT_F_W	Asserted when an autout august / autout payon fault agus agains	YES
				STATUS_WORD	5	INPUT_F_W	Asserted when an Input voltage/current/power fault or warning has occurred	YES
				(Upper byte of	4	MFG SPECIFIC F W	Manufacturer specific fault or warning has occurred	NO
				STATUS_WORD)	3	POWER_GOOD_L	Asserted when the POWER_GOOD signal is negated	YES
					2	FANS_F_W	Asserted when a fan fault or warning has occurred	YES
					1		Asserted when a bit in command STATUS_OTHER set	NO
					0	UNKNOWN_F_W	Asserted when a fault not listed in [15:1] has occurred	Yes
					7	VSB_VOUT_OV_F	Asserted when an output overvoltage fault has occurred	YES
					6	VOD_VOU1_UV_I	rooortoa vinori ari oatput ovorvoitage tault ilas ooculled	NO
					5			NO
					4	VSB_VOUT_UV_F	Asserted when an output undervoltage fault has occurred	YES
D4	VSB_STATUS_VOUT	R/W Byte	1		3	V3D_V001_0V_F	Asserted when an output undervoltage fault has occurred	NO
					2			NO
					1			NO
					0	VOD JOUT OO F		NO
					7	VSB_IOUT_OC_F	Asserted when an output overcurrent fault has occurred	YES
					6	VOD JOUT OO W		NO
					5	VSB_IOUT_OC_W	Asserted when an output overcurrent warning has occurred	YES
D5	VSB_STATUS_IOUT	R/W Byte	1		4			NO
	105_000				3			NO
					2			NO
					1			NO
					0			NO
D6	SEC_BL_FW_REVISION	Read Word	2				SEC Bootloader FW Revision = MM.mm Bit 0~7: Major Revision (MM); Bit8~15: Minor Revision (mm)	YES
D7	SEC_APP_FW_REVISION	Read Word	2				SEC Application FW Revision = MM.mm	YES
	020_111_111_112101011	11000 11010	_				Bit 0~7: Major Revision (MM); Bit8~15: Minor Revision (mm)	
D8	Optn_Time_Total	Block Read	1+4				This is a read of the Total Power ON Seconds (POS) the PSU has been powered on and delivering energy to the main output since it was manufactured. The register must increment in seconds while the main output is delivering energy. When the main output is not delivering energy the PSU must hold the current value. Time accuracy must be within +-5%. For example the returned value of 70 73 00 00 represents 29552s.	YES
D9	Optn_Time_Present	Block Read	1+4				This is a read of Total Power ON Seconds (POS) since the PSU has been powered on and delivering energy to the main output since it was last started. This value must be reset to Zero when the main output of the PSU is started. The register must increment in seconds while the main outputs is delivering energy. When the main output is not delivering energy the PSU must hold the current value. Time Accuracy must be within +-5%.  Main Output Current Share voltage	YES
DA	READ_IOUT1_ISHARE	Read Word	2				PMBus Data Format : Linear (N=-6) PMBus Resolution: 0.01563Vdc Full-scale : 16 Vdc Accuracy: +/-5% @>20% load	YES
DC	PRI_BL_FW_REVISION	Read Word	2				PRI Bootloader FW Revision = MM.mm Bit 0~7: Major Revision (MM); Bit8~15: Minor Revision (mm)	YES
DD	PRI_APP_FW_REVISION	Read Word	2		. = .		PRI Application FW Revision = MM.mm Bit 0~7: Major Revision (MM); Bit8~15: Minor Revision (mm)	YES
					15~3	RESERVED	Reserved	NO
DE	HOT_STANDBY	R/W Word	2		2	HS Status	0 = Not Activated; 1 = Activated	YES
			_		1	HS Enable Line	0 = Low; 1 = High	YES
					0	HS Select	0 = Disable (Default); 1 = Enable	YES



Command	OVATOR IN ELECTRO		# of		Bit(s)			Supported
Code	Command Name		# 01 Bytes	Byte Name	Number	Bit Name	Definition	Y/N
					15~3	RESERVED	Reserved	NO
DF	POWER_SUPPLY_CONTROL	R/W Word	2		2	EEPROM write protect control	U = Enable write protect (Detault); I = Disable write protect	YES
					1		0 = Disable SMB_ALERT_L (Default); 1 = Enable SMB_ALERT_L	YES
					0	Disable Fan	0 = Don't disable fan (Default); 1 = Disable fan	YES
E0	MFR_VOUT2_MIN	Read Word	2				Minimum rated value of the output voltage $= 3.135$ V. Always read C323h.	YES
E1	MFR_VOUT2_MAX	Read Word	2				Maximum rated value of the output voltage = 3.465V. Always read C377h.	YES
E2	MFR_IOUT2_MAX	Read Word	2				Maximum rated value of the output current = 5A. Always read CA80h.	YES
E3	MFR_POUT2_MAX	Read Word	2				Maximum rated value of the output power = 16.5W. Always read DA10h.	YES
E4 - FA	Reserve for manufacturer use						*	
FB	MFR_BLACK_BOX	Write Word	2				Data is saved to the Black Box for the following fault events: -General fault -Over voltage on output -Over current on output -Loss of AC input -Input voltage fault - Over temperature It should be organized as a 5 pages shift register. Page 0 record the latest failure. The history can be read via PMBus command (FBh) Write a key (55AAh) in FBh register to clear history log. Write format: AddrW FBh AAh 55h PEC	YES
FB	MFR_BLACK_BOX	Block write block read process call	1+41				Read format: AddrW FBh ByteCnt(1) FailurePage(0-4) AddrR ByteCnt(41) Data0 Data1Data40 PEC Data0: FailurePage Data1:2 STATUS_WORD(79h) Data3 V1_Status_Vout(7Ah) Data4 V1_Status_Iout(7Bh) Data5:6 Vsb_Status_Word(D3h) Data7 Vsb_Status_Vout(D4h) Data8 Vsb_Status_Iout(D5h) Data9 Status_Input(7Ch) Data10 Status_Temp(7Dh) Data11 Status_Fans_12(81h) Data12 Status_Fans_12(81h) Data15:16 Read_lin(89h) Data17:18 Read_Vout(8Bh) Data19:20 Read_lout(8Ch) Data21:22 Read_Temp2(8Eh) Data23:24 Read_Temp2(8Eh) Data25:26 Read_Temp3(8Fh) Data27:28 Read_Temp3(8Fh) Data23:30 Pri_Code_Version(DDh) Data33:36 Optn_Time_Total(D8h) Data37:40 Optn_Time_Present(D9h)	YES



Command Code	Command Name	Read / Write	# of Bytes	Byte Name	Bit(s) Number	Bit Name	Definition	Supported Y/N
00-3B	Same as page 0							
46	IOUT_OC_FAULT_LIMIT	R/W Word	2				Sets the value of the output current, in amperes, that causes the overcurrent detector to indicate an overcurrent fault condition. (Standby output latch off and VSB_IOUT_OC_F bit of VSB_STATUS_IOUT register is set).  Default setting is 3A. Allowable limit range is 0.1A to 3A.	YES
4A	IOUT_OC_WARN_LIMIT	R/W Word	2				Sets the value of the output current, in amperes, that causes the overcurrent detector to indicate an overcurrent warning. (Output keeps operating and VSB_IOUT_OC_W bit of VSB_STATUS_IOUT register is set). Warning status will be cleared when output current drops to 0.1A below the warning set threshold.  Default setting is 2.2A. Allowable limit range is 0.1A to 2.2A.	YES
51	Same as page 0							
5D	Same as page 0							
6A-6B	Same as page 0							
78	STATUS_BYTE	Read Byte	1	STATUS_BYTE (Lower byte of STATUS_WORD)	7 6 5 4 3 2		Asserted when device busy and unable to respond fault Asserted when unit not providing power to the output Asserted when an output overvoltage fault has occurred Asserted when an output overcurrent fault has occurred Asserted when an input undervoltage fault has occurred Asserted when an overtemperature fault or warning has occurred Asserted when a communications, memory, or logic fault has	YES YES YES YES YES YES YES
					1	CML_F	occurred	YES
					0	NONE_F_W	Asserted when a fault not listed in [7:1] occurred	YES
					7	BUSY F	Asserted when device busy and unable to respond fault	NO
					6	UNIT_OFF	Asserted when unit not providing power to the output	YES
				STATUS_BYTE (Lower byte of STATUS_WORD)  STATUS_WORD (Upper byte of	5	VSB_VOUT_OV_F	Asserted when an output overvoltage fault has occurred	YES
					4	VSB_IOUT_OC_F	Asserted when an output overcurrent fault has occurred	YES
					3	INPUT_UV_F	Asserted when an input undervoltage fault has occurred	YES
					1	CML_F	Asserted when an overtemperature fault or warning has occurred Asserted when a communications, memory, or logic fault has occurred	YES YES
					0	NONE F W	Asserted when a fault not listed in [7:1] occurred	YES
79	STATUS_WORD	Read Word	2		7	VCB VOLIT E W	Asserted when an output voltage fault or warning has occurred	YES
					6	VSB_IOUT_POUT_F_W	Asserted when an output current / output power fault or warning has occurred	YES
					5	INPUT_F_W	Asserted when an Input voltage/current/power fault or warning has occurred	YES
				STATUS_WORD)	4		Manufacturer specific fault or warning has occurred	NO VEC
				_	3 2	POWER_GOOD_L FANS F W	Asserted when the POWER_GOOD signal is negated Asserted when a fan fault or warning has occurred	YES YES
					1		Asserted when a bit in command STATUS_OTHER set	NO NO
					0		Asserted when a fault not listed in [15:1] has occurred	NO
					7		Asserted when an output overvoltage fault has occurred	YES
					6			NO
					5			NO
74	VOD CTATIO VOLIT	DAM Duta	4		4	VSB_VOUT_UV_F	Asserted when an output undervoltage fault has occurred	YES
7A	VSB_STATUS_VOUT	R/W Byte	1		3		· •	NO
					2			NO
					1			NO
					0	V05 10: = 55 =		NO
					7	VSB_IOUT_OC_F	Asserted when an output overcurrent fault has occurred	YES
					6	VCD IOUT OC W	Accorted when an autout avergureant warning has accoursed	NO VEC
					5 4	VSB_IOUT_OC_W	Asserted when an output overcurrent warning has occurred	YES NO
7B	VSB_STATUS_IOUT	R/W Byte	1		3			NO NO
					2			NO NO
					1			NO
					0			NO
7C-89	Same as page 0							

Command Code	Command Name	Read / Write	# of Bytes	Byte Name	Bit(s) Number	Bit Name	Definition	Supported Y/N
www.mur	ata.com/support							




#### PMBus™ Communication Protocol

ACAN-102 Application Note

INNC	DVATOR IN ELECT	KONICS			
8B	READ_VOUT2	Read Word	2	Standby Output Voltage Sensor Reading in Vdc PMBus Data Format : Linear (N=-6) PMBus Resolution: 0.01563Vdc Full-scale : 16 Vdc Accuracy: +/-2%	YES
8C	READ_IOUT2	Read Word	2	Standby Output Current Sensor Reading in Adc PMBus Data Format : Linear (N=-7) PMBus Resolution: 0.00781A Full-scale : 8A Accuracy: +/-5% @>20% load	YES
8D-90	Same as page 0				
96	READ_POUT2	Read Word	2	Standby Output Power Sensor reading in watts  PMBus Data Format : Linear (N=-5)  PMBus Resolution: 0.03125W  Full-scale : 32W  Accuracy: +/-5% @>20% load	YES
97-A3	Same as page 0				
A4	MFR_VOUT2_MIN	Read Word	2	Minimum rated value of the output voltage = 3.135V. Always read C323h.	YES
A5	MFR_VOUT2_MAX	Read Word	2	Maximum rated value of the output voltage = 3.465V. Always read C377h.	YES
A6	MFR_IOUT2_MAX	Read Word	2	Maximum rated value of the output current = 5A. Always read CA80h.	YES
A7	MFR_POUT2_MAX	Read Word	2	Maximum rated value of the output power = 16.5W. Always read DA10h.	YES
A7 - FF	Same as page 0				

#### Linear Data Format

Telemetry sensor and output voltage readings follow linear format as defined by PMBus Power System Mgt Protocol Specification - Part II - Revision 1.2 (summarized below)

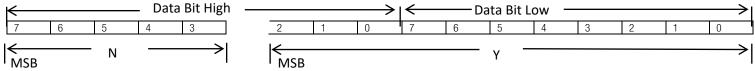

The Relationship between Y, N and the "real world" value is:

 $X = Y \cdot 2^{\text{N}}$ 

Where, as described above:

X is the "real world" value; Y is an 11 bit, two's compliment integer; and N is a 5 bit, two's compliment integer.

Link back to **VOUT MODE** command list

Murata Power Solutions, Inc. 129 Flanders Rd. Westborough, MA 01581, USA. ISO 9001 REGISTERED



This product is subject to the following operating requirements and the Life and Safety Critical Application Sales Policy: Refer to: https://www.murata.com/requirements/

Murata Power, Inc. makes no representation that the use of its products in the circuits described herein, or the use of other technical information contained herein, will not infringe upon existing or future patent rights. The descriptions contained herein do not imply the granting of licenses to make, use, or sell equipment constructed in accordance therewith. Specifications are subject to change without notice.

©2024 Murata Power Solutions, Inc.